


GENERAL INSTRUCTIONS



Fan Wheel Replacement

View these instructions online at www.lbwhite.com

- Fan wheel to motor mount or fan panel spacing must be at proper clearance. Refer to table and illustration.
- The fan wheel must neither rub on the air inlet of the fan housing nor on the motor's bolts.
- Ensure the fan wheel set screw is located on the flat side of the motor shaft before tightening.
- Contact L.B. White Co. if you have any questions.

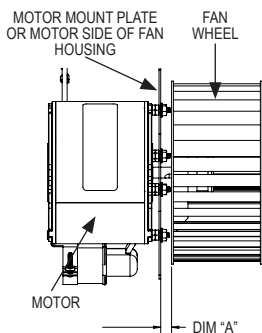

MODEL	DIM "A"	
CLASSIC 60 & 115	5/16 in. (7.94 mm)	
ALL GUARDIAN 60	3/8 in. (9.53 mm)	
ALL GUARDIAN 100	60HZ	1/4 in. (6.35 mm)
	50HZ	5/16 in. (7.94 mm)
GUARDIAN 250 & 325	1/8 in. (3.18 mm)	
GUARDIAN 250 2.0	3/32 in. (2.38 mm)	
GUARDIAN 325 2.0	3/16 in. (4.78 mm)	

150-25326 REV.B

WORLD PROVIDER - INNOVATIVE HEATING SOLUTIONS

411 Mason Street, Onalaska, WI 54650 • 800-345-7200 • 608-783-5691 • 608-783-6115 (fax) • www.lbwhite.com


GENERAL INSTRUCTIONS



Fan Wheel Replacement

View these instructions online at www.lbwhite.com

- Fan wheel to motor mount or fan panel spacing must be at proper clearance. Refer to table and illustration.
- The fan wheel must neither rub on the air inlet of the fan housing nor on the motor's bolts.
- Ensure the fan wheel set screw is located on the flat side of the motor shaft before tightening.
- Contact L.B. White Co. if you have any questions.

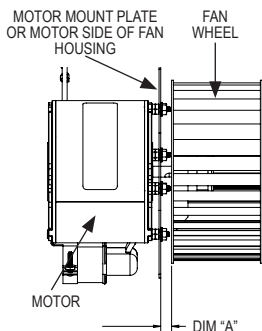

MODEL	DIM "A"	
CLASSIC 60 & 115	5/16 in. (7.94 mm)	
ALL GUARDIAN 60	3/8 in. (9.53 mm)	
ALL GUARDIAN 100	60HZ	1/4 in. (6.35 mm)
	50HZ	5/16 in. (7.94 mm)
GUARDIAN 250 & 325	1/8 in. (3.18 mm)	
GUARDIAN 250 2.0	3/32 in. (2.38 mm)	
GUARDIAN 325 2.0	3/16 in. (4.78 mm)	

150-25326 REV.B

WORLD PROVIDER - INNOVATIVE HEATING SOLUTIONS

411 Mason Street, Onalaska, WI 54650 • 800-345-7200 • 608-783-5691 • 608-783-6115 (fax) • www.lbwhite.com